

Epson Projector Remote Control Tutorial

A door flips open on this remote for additional options. These options include choosing a source, menus, and help screens.



Be sure the power for the remote is on before replacing its batteries.



Menu button – Also clears settings when ESCAPE does not work

Help button

Source buttons



This unit takes two AA batteries.